


User Manual

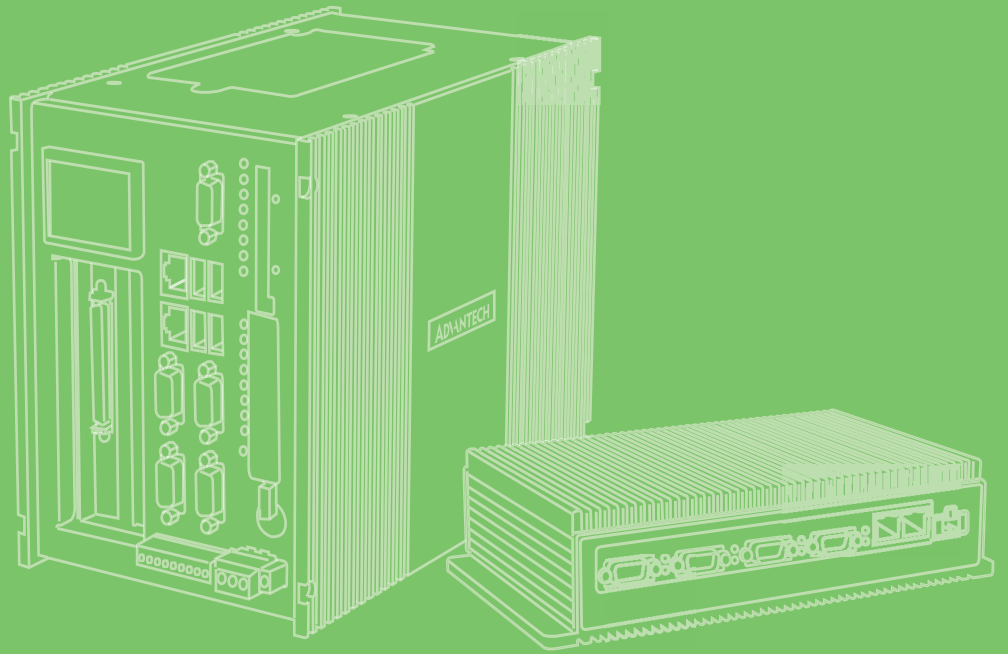

UNO-1483G

Embedded Automation

Computer with Intel[®] Core™ i
Processor, 4 x GbE, 3 x mPCIe, 1
PCIe (Optional PCI), DP/VGA

ADVANTECH

Enabling an Intelligent Planet

限用物質含有情況標示聲明書

| | | | | | | |
|---|--|-------------------------------------|-----------------------------|--|--|--|
| 設備名稱: Equipment name | 電腦 | 型號 (型式): Type designation (Type) | UNO-1483G 系列 (系列型號參見說明書) | | | |
| 單元 Unit | 限用物質及其化學符號 Restricted substances and its chemical symbols | | | | | |
| | 鉛 Lead (Pb) | 汞 Mercury (Hg) | 鎘 Cadmium (Cd) | 六價鉻 Hexavalent chromium (Cr ⁺⁶) | 多溴聯苯 Polybrominated biphenyls (PBB) | 多溴二苯醚 Polybrominated diphenyl ethers (PBDE) |
| 電路板 | — | ○ | ○ | ○ | ○ | ○ |
| 機殼 (外殼、支 架 … 等) | ○ | ○ | ○ | ○ | ○ | ○ |
| 其它固定 組件 (螺絲) | — | ○ | ○ | ○ | ○ | ○ |
| 配件 (線材) | ○ | ○ | ○ | ○ | ○ | ○ |
| 記憶卡 | — | ○ | — | ○ | ○ | ○ |
| <p>備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。 Note 1. “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.</p> <p>備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2. “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.</p> <p>備考 3. “—” 係指該項限用物質為排除項目。 Note 3. The “-” indicates that the restricted substance corresponds to the exemption.</p> | | | | | | |

Copyright

The documentation and the software included with this product are copyrighted 2019 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

IBM, PC/AT, PS/2 and VGA are trademarks of International Business Machines Corporation.

Intel and Core are trademarks of Intel Corporation

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Support

For more information on this and other Advantech products, please visit our websites at: <http://www.advantech.com>

For technical support and service, please visit our support website at: <http://support.advantech.com/>

This manual applies to the below model which is abbreviated as UNO-1483G series products in this article.

*Model number:

UNO-1483G

*Part number:

UNO-1483G-434AE

UNO1483G434A1401E-T; UNO1483G434A1402E-T

UNO1483G434A1501E-T; UNO1483G434A1502E-T

UNO1483G434A1601E-T; UNO1483G434A1602E-T

UNO1483G434A1603E-T; UNO1483G434A1701E-T

UNO1483G434A1702E-T; UNO1483G434A1703E-T

UNO1483G434A1704E-T; UNO1483G434A1801E-T

UNO1483G434A1802E-T; UNO1483G434A1803E-T

UNO1483G434A1804E-T; UNO1483G434A1901E-T

UNO1483G434A1902E-T; UNO1483G434A1903E-T

UNO1483G434A1904E-T; UNO1483G434A2001E-T

UNO1483G434A2002E-TI UNO1483G434A2003E-T

UNO1483G434A2004E-T

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from Advantech. Please contact your local supplier for ordering information.

FCC Class A

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

警告使用者：這是甲類資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當對策。

Technical Support and Assistance

1. Visit the Advantech web site at support.advantech.com/ where you can find the latest information about the product.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 15. The power cord or plug is damaged.
 16. Liquid has penetrated into the equipment.
 17. The equipment has been exposed to moisture.
 18. The equipment does not work well, or you cannot get it to work according to the user's manual.
 19. The equipment has been dropped and damaged.
 20. The equipment has obvious signs of breakage.
21. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -10°C (-14° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
22. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**
ATTENTION: Danger d'explosion si la batterie est mal REMPLACÉ. REMPLACER UNIQUEMENT PAR LE MEME TYPE OU EQUIVALENT RECOMMANDÉ PAR LE FABRICANT, jeter les piles usagées SELON LES INSTRUCTIONS DU FABRICANT.
23. The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

安全指示

1. 請仔細閱讀此安全操作說明。
2. 請妥善保存此用戶手冊供日後參考。
3. 用濕抹布清洗設備前，請從插座拔下電源線。請不要使用液體或去汙噴霧劑清洗設備。
4. 對於使用電源線的設備，設備周圍必須有容易接觸到的電源插座。
5. 請不要在潮濕環境中使用設備。
6. 請在安裝前確保設備放置在可靠的平面上，意外跌落可能會導致設備損壞。
7. 設備外殼的開口是用於空氣對流，從而防止設備過熱。**請勿覆蓋開孔。**
8. 當您連接設備到電源插座上前，請確認電源插座的電壓是否符合要求。
9. 請將電源線佈置在人們不易絆到的位置，並不要在電源線上覆蓋任何雜物。
10. 請注意設備上的所有警告和注意標語。
11. 如果長時間不使用設備，請將其同電源插座斷開，避免設備被超標的電壓波動損壞。
12. 請不要讓任何液體流入通風口，以免引起火災或者短路。
13. 請不要自行打開設備。為了確保您的安全，請由經過認證的工程師來打開設備。
14. 如遇下列情況，請由專業人員來維修：
 - 電源線或者插頭損壞；
 - 設備內部有液體流入；
 - 設備曾暴露在過於潮濕的環境中使用；
 - 設備無法正常工作，或您無法通過用戶手冊來使其正常工作；
 - 設備跌落或者損壞；
 - 設備有明顯的外觀破損。
15. 請不要把設備放置在超出我們建議的溫度範圍的環境，即不要低於 0° C (32° F) 或高於 40° C (104° F)，否則可能會損壞設備。
16. **注意：**若電池放置不正確，將有爆炸的危險。因此，只可以使用製造商推薦的同一種或者同等型號的電池進行替換。請按照製造商的指示處理舊電池。
17. 根據 IEC 704-1:1982 的規定，操作員所在位置的聲壓級不可高於 70dB(A)。
18. **限制區域：**請勿將設備安裝於限制區域使用。
19. **免責聲明：**該安全指示符合 IEC 704-1 的要求。研華公司對其內容的準確性不承擔任何法律責任。

Contents

| | | |
|-------------------|---|-----------|
| Chapter 1 | Overview..... | 1 |
| 1.1 | Introduction | 2 |
| 1.2 | Safety Precautions | 2 |
| 1.3 | Accessories..... | 3 |
| Chapter 2 | Hardware Functionality | 5 |
| 2.1 | Introduction | 6 |
| | Figure 2.1 Front of UNO-1483G | 6 |
| | Figure 2.2 Top of UNO-1483G | 6 |
| 2.2 | Serial Interface (COM1~COM3)..... | 7 |
| | 2.2.1 RS-232 Interface (COM 1)..... | 7 |
| | 2.2.2 Automatic Data Flow Control Function for RS-485 | 7 |
| 2.3 | LAN: Ethernet Connector | 7 |
| 2.4 | Power Connector | 7 |
| 2.5 | USB Connector | 7 |
| 2.6 | Display Connector | 7 |
| 2.7 | RTC Battery | 8 |
| | Figure 2.3 RTC Battery Location | 8 |
| 2.8 | Power Button/Power Management | 8 |
| 2.9 | Reset Button | 8 |
| 2.10 | PCI Express Mini Card Socket..... | 9 |
| 2.11 | iDoor Expansion Slot..... | 9 |
| 2.12 | PCIe Slot (Optional PCI slot by project)..... | 10 |
| 2.13 | Antenna Mounting | 10 |
| 2.14 | Dual Power Input and Remote Power Control | 10 |
| 2.15 | Audio Jack..... | 10 |
| 2.16 | LED Indicators..... | 11 |
| 2.17 | Digital Input and Output and Remote Power..... | 11 |
| Chapter 3 | Initial Setup | 13 |
| 3.1 | Chassis Grounding..... | 14 |
| | Figure 3.1 Chassis Grounding Connection..... | 14 |
| 3.2 | Inserting a mSATA | 14 |
| 3.3 | Installing a Wireless LAN Card and Antenna (optional) | 15 |
| 3.4 | Installing a Hard Disk | 17 |
| 3.5 | BIOS Setup | 18 |
| 3.6 | Din Rail Kit Assembly..... | 19 |
| 3.7 | Connecting Power | 20 |
| Appendix A | System Settings and Pin Assignments | 21 |
| A.1 | System I/O Address and Interrupt Assignment | 22 |
| | Table A.1: Interrupt Assignments..... | 22 |
| A.2 | Board Connectors and Switches..... | 23 |
| | Figure A.1 Connector & Jumper Locations (front)..... | 23 |
| | Table A.2: Connectors and Jumpers | 23 |
| A.3 | RS-232 Standard Serial Port (COM1)..... | 24 |
| | Table A.3: RS-232 Serial Port Pin Assignments..... | 24 |
| A.4 | RS-422/485 Serial Port (COM2,3) | 24 |

| | | |
|-----|--|----|
| | Table A.4: RS-422/485 Serial Port Pin Assignments..... | 24 |
| A.5 | Power Connector (PWR) | 25 |
| | Table A.5: Power connector pin assignments | 25 |
| A.6 | USB Connector | 25 |
| | Table A.6: USB 2.0 Connector Pin Assignments..... | 25 |
| A.7 | DisplayPort Display Connector | 26 |
| | Table A.7: DisplayPort adaptor cable pin assignment..... | 26 |
| A.8 | Clear CMOS (SW3) | 27 |
| A.9 | AT/ATX setup..... | 27 |

Chapter 1

Overview

This chapter provides an overview of the products specifications.

Sections include:

- Introduction
- Safety precautions
- Accessories

1.1 Introduction

The UNO-1483G is an embedded Application ReadyPlatform (ARP) that can shorten your development time and offers rich networking interfaces to fulfill the extensive needs of different projects. UNO-1483G includes Intel's latest Core i technology and provides multiple interfaces including up to 3 serial ports, 4 x GbE LAN, 4 x USB ports. UNO-1483G supports two display types, DisplayPort and VGA for various high resolution requirements.

The UNO-1483G can operate in wide temperatures (from -20 to 60°C). UNO-1483G even uses the Intel Core i CPU and up to 8GB DDR3 RAM for heavy duty programs. The UNO-1483G provides great expansion capability including 3 x Mini PCIe and SIM card support. With these expansions and iDoor technology, UNO-1483G has great expandability from Wi-Fi, 3G, I/O expansion and fieldbus card with iDoor technology.

With a wide array of OS and driver support, such as Windows 7/8, WES7/WE8S, and embedded Linux, users can integrate applications easily in an application ready platform that can provide a versatile functions to fulfill diverse requirements.

1.2 Safety Precautions

The following sections tell how to make each connection. In most cases, you will simply need to connect a standard cable.

Note! Safety Certification Temperature 50°C(122°F)



Warning! Always disconnect the power cord from your chassis whenever you are working on it. Do not connect while the power is on. A sudden rush of power can damage sensitive electronic components. Only experienced electronics personnel should open the chassis.



Warning! Toujours débrancher le cordon d'alimentation de votre boîtier lorsque vous êtes travailler. Ne branchez pas lorsque l'appareil est allumé. Un afflux soudain de puissance peut endommager les composants électroniques sensibles. Seulement connu personnel de l'électronique devraient ouvrir le châssis.



Caution! Always ground yourself to remove any static electric charge before touching the product. Modern electronic devices are very sensitive to static electric charges. Use a grounding wrist strap at all times. Place all electronic components on a static-dissipative surface or in a static-shielded bag.



Caution! Toujours à la terre pour éliminer toute charge d'électricité statique avant toucher UNO-1483G. Appareils électroniques modernes sont très sensibles à charges d'électricité statique. Utilisez un bracelet antistatique à tout moment. Placez tous composants électroniques sur une surface antistatique ou dans un statique-sac blindé.



1.3 Accessories

Please refer below for the accessory list:

- 7-pin connector for power wiring
- 10-pin connector for Digital I/O wiring
- Din-Rail Mounting Bracket
- Wallmount Mounting Bracket
- 4 screws for HDD
- 6 screws for mPCIe slot
- 4 screws for wall mounting bracket
- 3 screws for DIN-Rail Bracket
- Driver DVD
- Warranty card

If anything is missing or damaged, contact your distributor or sales representative immediately.

Chapter 2

Hardware Functionality

This chapter shows how to setup the product's hardware functions, including connecting peripherals, setting switches and indicators.

Sections include:

- Introduction
- Serial Interface
- LAN / Ethernet Connector
- Power Connector
- USB Connector
- Display Connector
- RTC Battery
- Power Button/Power Management
- Reset Button
- mPCIe Socket
- iDoor Expansion Slot
- PCIe Slot
- Antenna Mounting
- Dual Power Input and Remote Power Control
- Audio Jack
- LED Indicators

2.1 Introduction

The following figures show the connectors on the product. The following sections give you information about each peripheral.

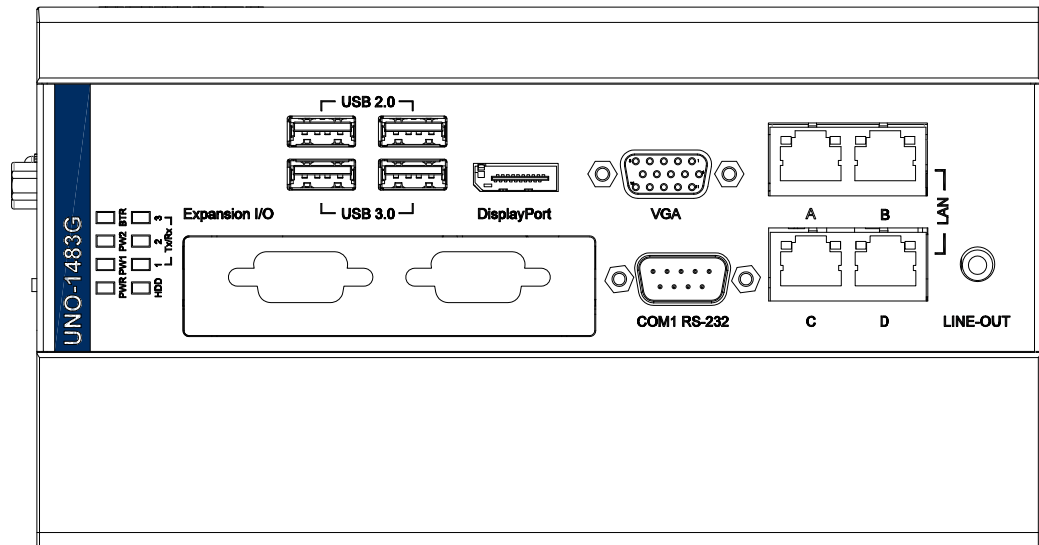


Figure 2.1 Front of UNO-1483G

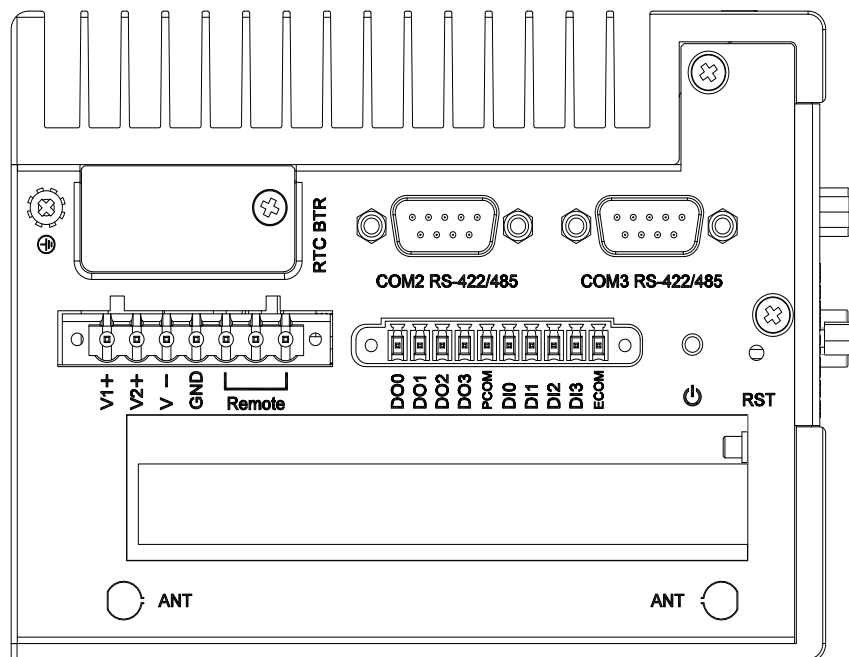


Figure 2.2 Top of UNO-1483G

2.2 Serial Interface (COM1~COM3)

The UNO-1483G offers one standard RS-232 and two RS-422/485 (with cable) serial communication inter-face ports: COM1 ~ COM3.

The IRQ and I/O address range are listed below:

COM1: 3F8h, IRQ4

COM2: 2F8h, IRQ3

COM3: 3E8h, IRQ10

2.2.1 RS-232 Interface (COM 1)

The UNO-1483G offers one RS-232 serial communication interface ports: COM1. Please refer to Appendix A.3 for their pin assignments.

2.2.2 Automatic Data Flow Control Function for RS-485

In RS-485 mode, the UNO-1483G automatically detects the direction of incoming data and switches its transmission direction accordingly. So no handshaking signal (e.g. RTS signal) is necessary. This lets you conveniently build an RS-485 network with just two wires. More importantly, application software previously written for half duplex RS-232 environments can be maintained without modification.

2.3 LAN: Ethernet Connector

The UNO-1483G is equipped with 4 x Gigabit LAN controllers. The controller chip used is the Intel Ethernet controller that is fully compliant with 802.1Qav, IEEE1588/802.1AS, 802.3az standards and Intel® AMT function (Intel AMT function accompanies certain SKU's of Core i processors). The Ethernet port provides four standard RJ-45 jacks on the front I/O and LED indicators in front of the connector to show its status of Link (100Mbps orange LED, 1000Mbps green LED) and Active (flashing green LED) status.

2.4 Power Connector

The UNO-1483G comes with a Phoenix connector that carries 12/24VDC external power input, and features reversed wiring protection. Therefore, it will not cause any damage to the system by reversed wiring of ground line and power line. Please refer to Appendix A.

2.5 USB Connector

The USB interface supports Plug and Play, which enables you to connect or disconnect a device, without turning off the computer. This provides four USB connectors, which gives complete Plug & Play and hot swapping for up to 127 external devices. Two of the four connectors are compatible with USB3.0 devices. The USB interface is USB EHCI, Rev. 2.0 compliant. The USB interface can be disabled in the system BIOS setup. Please refer to Appendix A for its pin assignment.

2.6 Display Connector

The UNO-1483G provides a DisplayPort and VGA controller for a high resolution interface. It supports up to full HD resolution for two independent displays.

2.7 RTC Battery

The RTC Battery to ensures the setting in BIOS and system clock can be kept, even with power disconnected for a short time.

- **Type:** BR2032 (Using CR2032 is NOT recommended)
- **Output Voltage:** 3 V_{DC}
- **Location:** Top side removable cover named RTC BTR

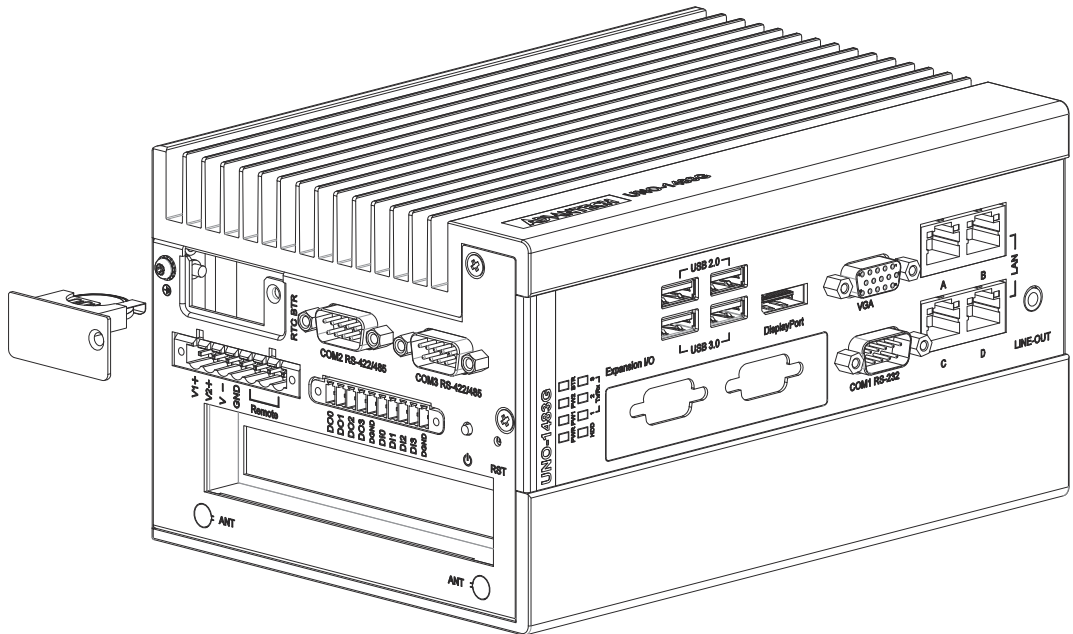


Figure 2.3 RTC Battery Location

2.8 Power Button/Power Management


Press the "PWR" button to power on or power off (ATX type). This product supports the ACPI (Advanced Configuration and Power Interface). As well as power on/off, it supports multiple suspend modes, such as Power on Suspend (S1), Suspend to RAM (S3), Suspend to Disk (S4).

2.9 Reset Button

Press the "Reset" button to activate the hardware reset function.

2.10 PCI Express Mini Card Socket

There are two sockets for full size and one half size PCI Express mini cards. The first interface (CN14) is the default defined for mSATA. The second (CN6) interface is mainly target to support iDoor technology/module for diversified application such as isolated COM port, Profibus, WLAN GPRS, 3G, mRAM and so on. Users can install the card easily by using the optional kit, please refer to Chapter 3 for details. An additional SIM card slot is used for 3G applications. Note, you still require a 3G Mini-PCle module installed to be able to use 3G functions. The third one (CN31) is a half-sized mini PCIe card which can be installed with Wi-Fi, Bluetooth, GPS modules for example.

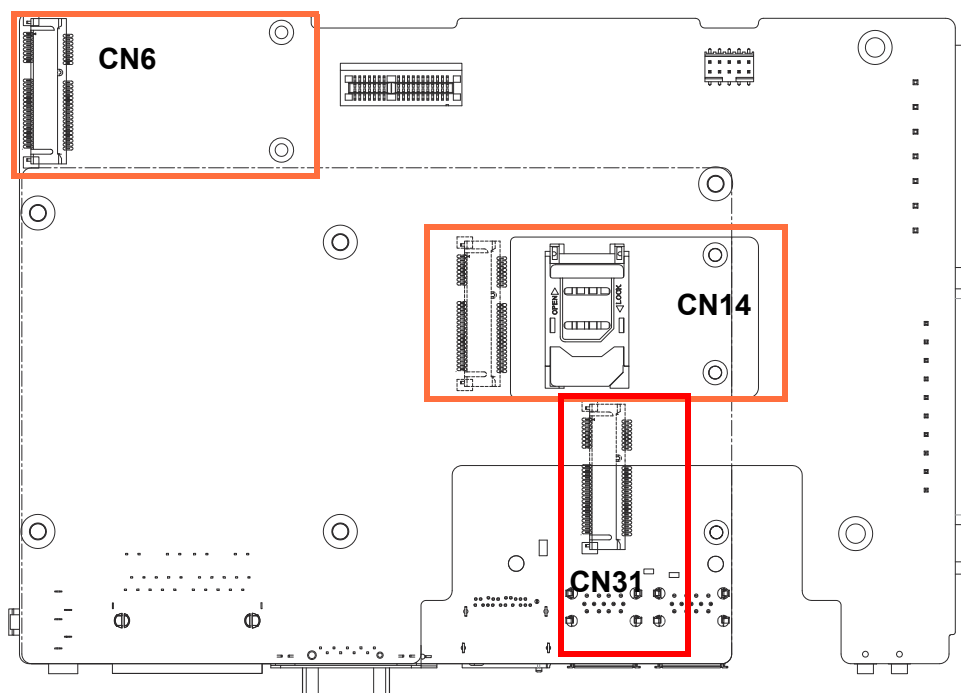


2.11 iDoor Expansion Slot

At the front side, there's a iDoor Expansion slot that allows users to install mPCIe modules to extend extra I/O ports for specific application, like Isolation COM, Digital I/O, CANOpen modules.

2.12 PCIe Slot (Optional PCI slot by project)

The PCIe slot could provide user to install standard PCIe card compatible with PCIe x1, for example, USB expansion card, Ethernet expansion cards etc.

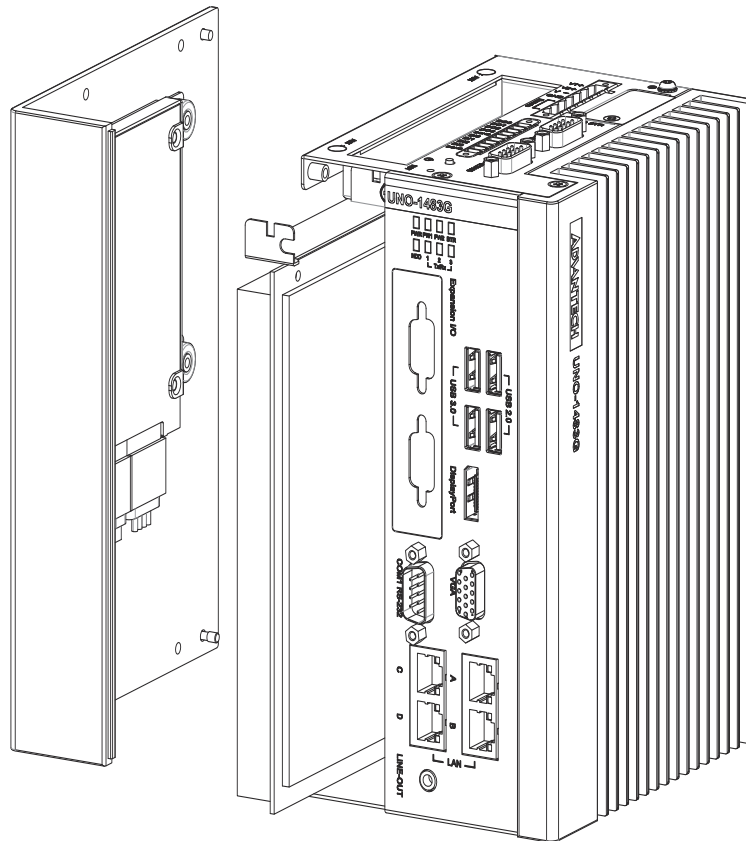

2.13 Antenna Mounting

This product offers two antenna mounting holes covered by pre-cut holes for users to install with antenna kit once users need 3G, WiFi or other wireless functions.

2.14 Dual Power Input and Remote Power Control

There are two additional functions for field applications combined in the power connector. One is a secondary power input that helps users plug-in a second power source to prevent main power source failure. The other is the remote power button that helps users remotely power up or power down the controller from a distance.

2.15 Audio Jack

This product provides one Line-out port for local alarm functions.

2.16 LED Indicators

There are eight LEDs to indicate the status of the system power, power input 1, power input 2, RTC battery, storage read/write, COM1~3 transmit/receive.

- **PWR**: Green means normal, orange means standby.
- **PWR1, PWR2**: Red means power input source is abnormal, check the power input source.
- **RTC**: Red means RTC battery abnormal, check the RTC battery.
- **HDD, Tx/Rx1~3**: Flashing green means signals are being transmitted and received.

2.17 Digital Input and Output and Remote Power

There are four digital inputs and four digital outputs configured from GPIO pins for most of on/off trigger and status reading.

Digital Input

- Input Channels 4
- Input Voltage (Wet Contact), configure SW7 to 1,3
 - Logic 0: 0~3 V_{DC}
 - Logic 1: 10~30 V_{DC}
- Input Voltage (Dry Contact), configure SW7 to 2,4
 - Logic 0: Open
 - Logic 1: Shorted to GND
- Input Current
 - 10 V_{DC} @ 2.67mA
 - 20 V_{DC} @ 5.64mA
 - 30 V_{DC} @ 8.91mA
- Isolation Protection 2,500 V_{DC}
- Overvoltage Protection 30 V_{DC}

Digital Output

- Channels 4
- Output Voltage: 5~30V_{DC}
- Output Capability Sink: 24 mA max./channel
- Open Collector to 30V

Remote Power Button

- Wet contact, configure SW3(on upper board) to 1,3
 - Logic level 1: 10~30V
 - Logic level 0: 3Vmax
- Dry contact, configure SW3(on upper board) to 3,4
 - Logic level 1
 - Logic level 0

Chapter 3

Initial Setup

This chapter introduces how to initialize the UNO-1483G.

Sections include:

- Chassis Grounding
- Inserting a mSATA
- Installing a wireless LAN card and Antenna
- Installing iDoor expansion kit
- Installing a Hard Disk
- Connecting Power
- BIOS Setup

3.1 Chassis Grounding

The UNO-1483G provides good EMI protection and a stable grounding base. There is an easy-to-connect chassis grounding point to use.

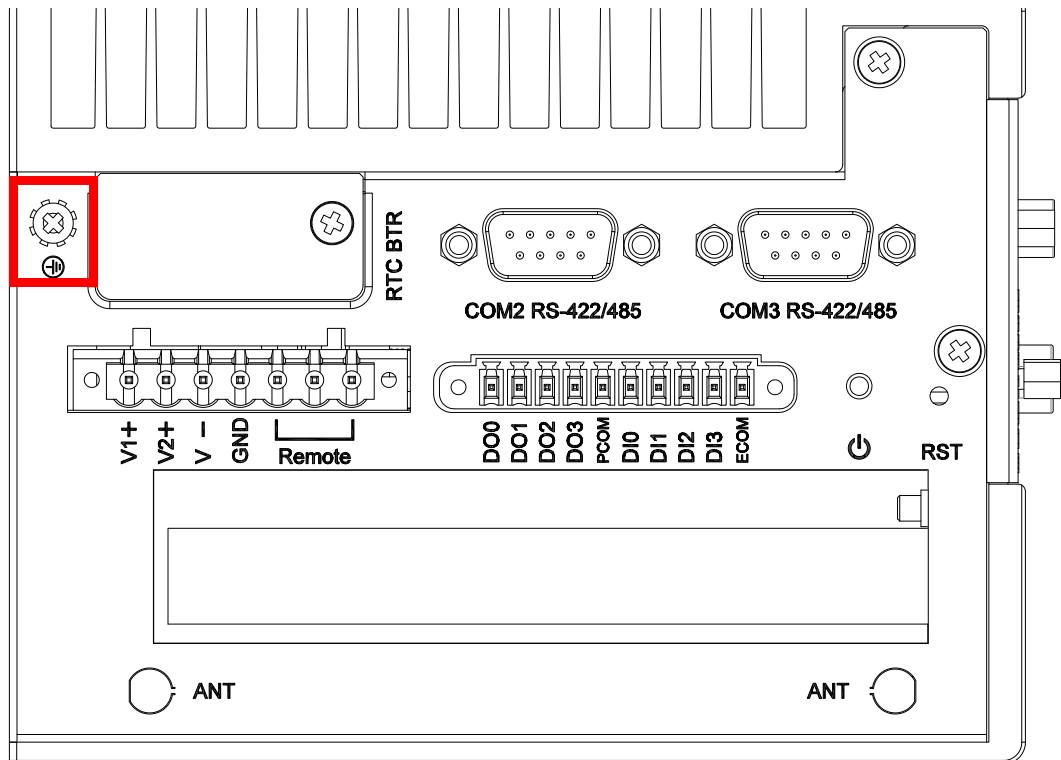


Figure 3.1 Chassis Grounding Connection

Please also note that system ground and chassis ground are separated.


3.2 Inserting a mSATA

1. Remove the power cord.
2. Loosen the four screws in the left cover.
3. Plug a mSATA card with your OS and application program into the first mPCIe slot (CN14).
4. Screw the two screws on board to fix mSATA.
5. Secure the left cover.


3.3 Installing a Wireless LAN Card and Antenna (optional)

Please contact Advantech to prepare the following optional kit:

Rear Panel for Antenna

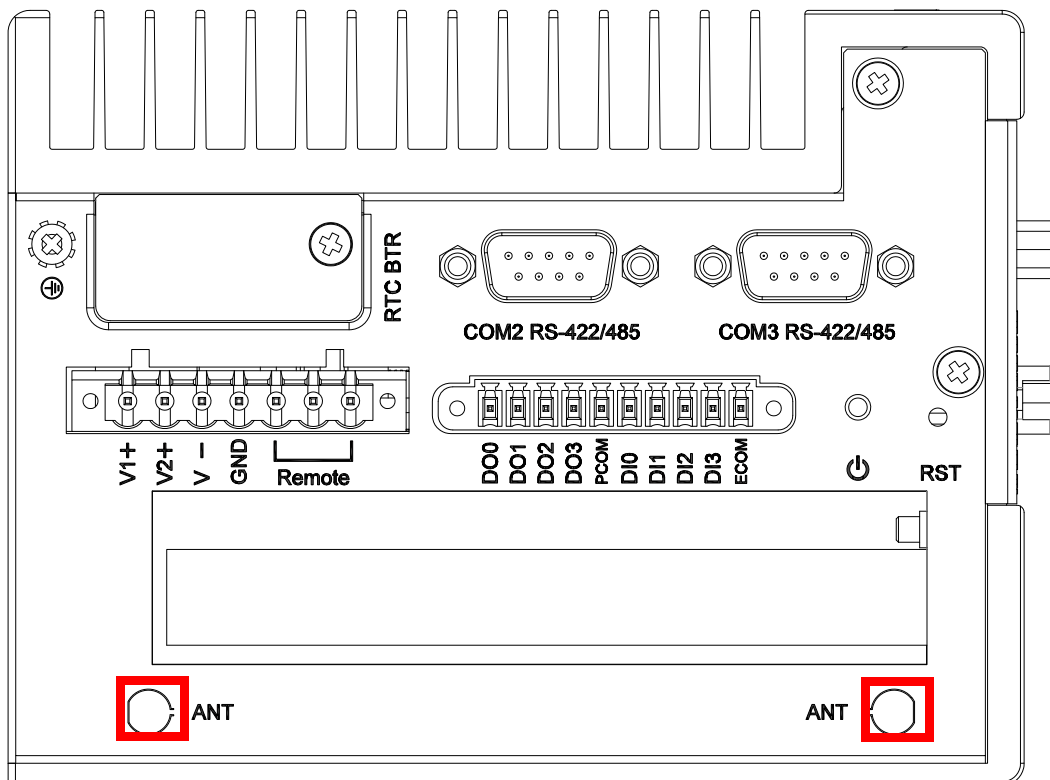

- The internal cable: 1750006043 (15cm)

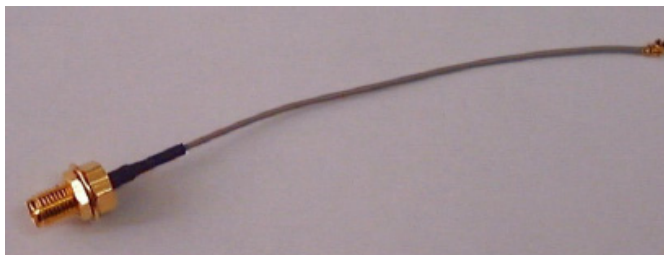

Wireless Module (PCI Express mini card)

- One of the suggested module is EWM-W151H01E which is a verified Wireless IEEE 802.11b/g/n module


Antenna

- Please select the necessary specification according to your application.
- One of the suggested antenna is 1750002842.



Then follow the below steps for the installation:

1. Unscrew the left cover and open it.
2. Remove the hole(s) on the top panel for antenna installation.
3. Install the internal cable 1750006043 (15cm) on the top panel.
4. Plug the Wireless module onto the PCI Express mini card socket

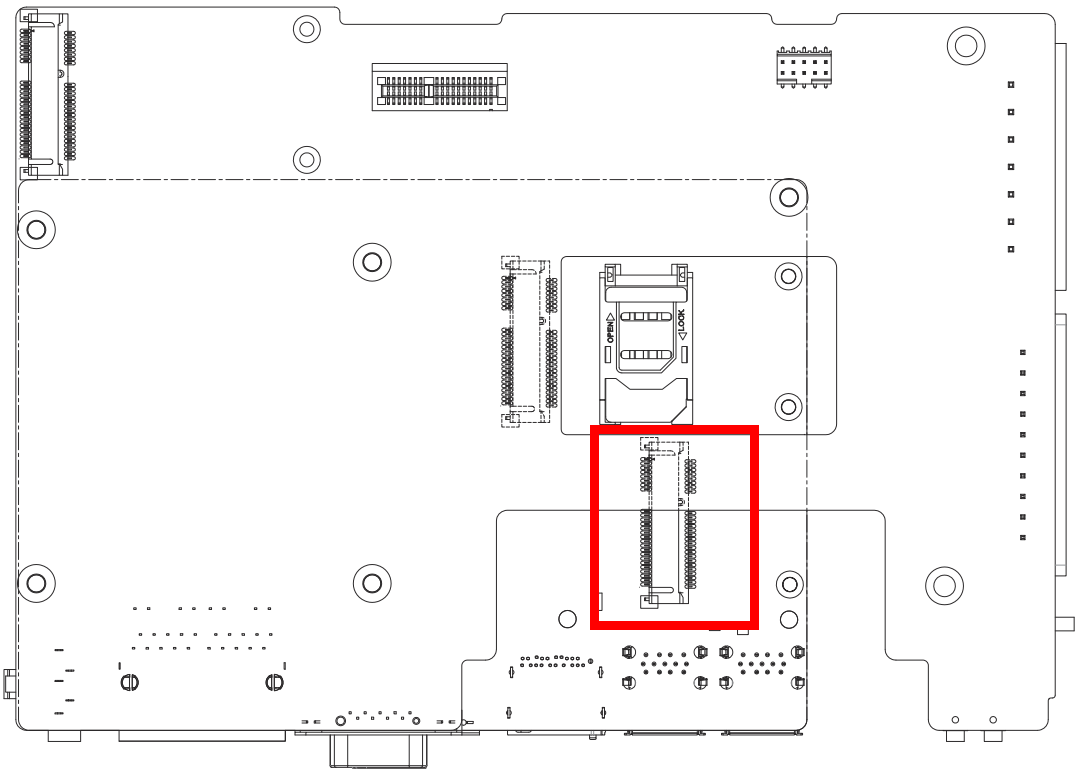


5. Connect the internal cable with the module.
6. Screw back the left cover.
7. Assemble the antenna on the SMA connector.


3.4 Installing a Hard Disk

The procedure for installing a hard disk into the UNO-1483G is below. Please follow these steps carefully. Please note the system is not compatible with +12V HDD.

Please use an HDD with lower power input.

1. Remove the power cord.
2. Unscrew the four screws from the left cover.
3. Screw HDD to the left cover.

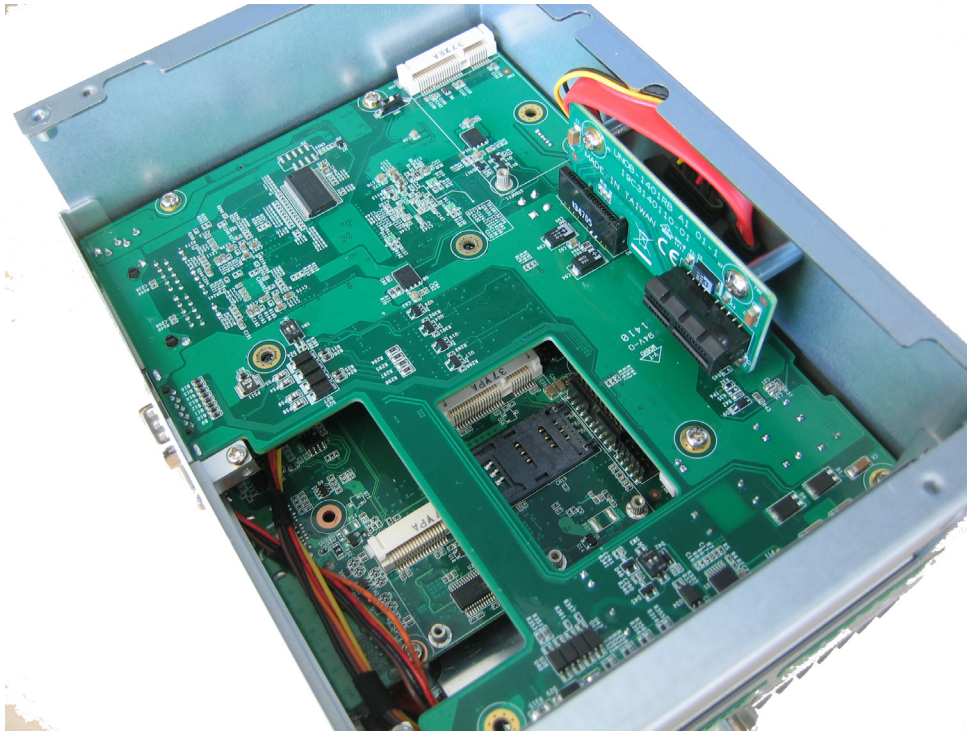

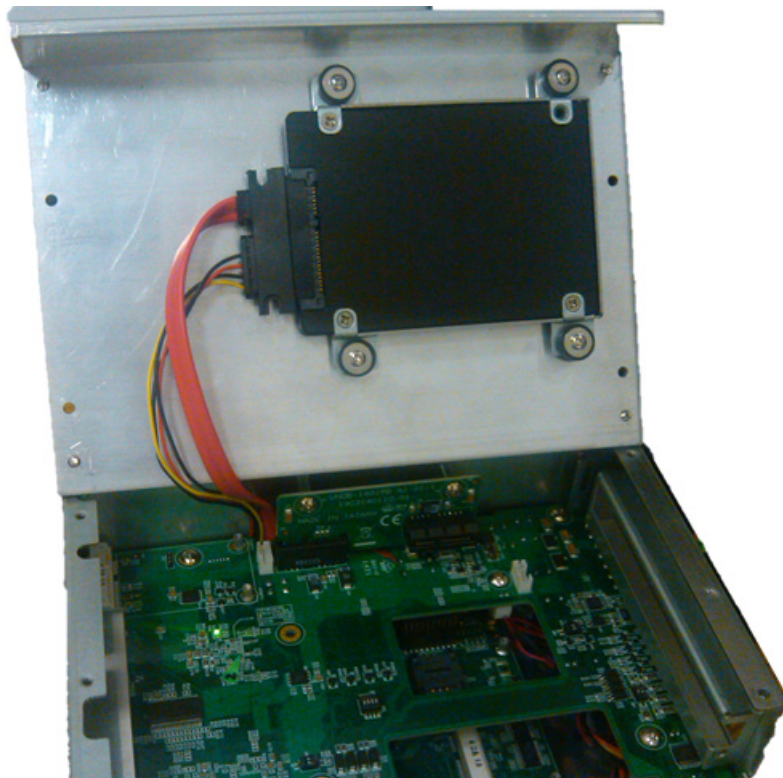

4. Screw back the left cover with four screws.

3.5 BIOS Setup

Press “F2” in the boot-up screen to enter the BIOS setup utility. Please follow the instruction on the screen to do the necessary settings.

Please note that you can try to “Restore Defaults” from the BIOS Setup manual if the UNO-1483G does not work properly.

3.6 Din Rail Kit Assembly

The UNO-1483G supports Din-Rail and wall mounting. The assembly instructions are below.

a. vertical Din-Rail

b. horizontal Din-Rail



c. wall mount (left side)

d. wall mount (back side)



3.7 Connecting Power

This product is intended to be supplied by a Listed DC Power Source, rated 12/24Vdc, 5A minimum and Tma 60 degree C, if need further assistance, please contact Advantech for further information.

Appendix **A**

System Settings and
Pin Assignments

A.1 System I/O Address and Interrupt Assignment

Table A.1: Interrupt Assignments

| Interrupt No. | Interrupt Source |
|----------------------|---------------------------------------|
| NMI | Parity Error Detected |
| IRQ 0 | Interval timer |
| IRQ 1 | Keyboard |
| IRQ 2 | Interrupt from controller 2 (cascade) |
| IRQ 3 | COM 2 |
| IRQ 4 | COM 1 |
| IRQ 8 | Real-time clock |
| IRQ 9 | Microsoft ACPI-Compliant System |
| IRQ 16 | LAN |
| IRQ 17 | USB |
| IRQ 18 | USB and graphics |
| IRQ 19 | HD audio and SATA |
| IRQ 10 | COM 3 |
| IRQ 7 | Watchdog |

A.2 Board Connectors and Switches

There are several connectors and switches on the inside board. The following sections tell you how to configure the hardware setting. Figure A.1 shows the locations the connectors and switches.

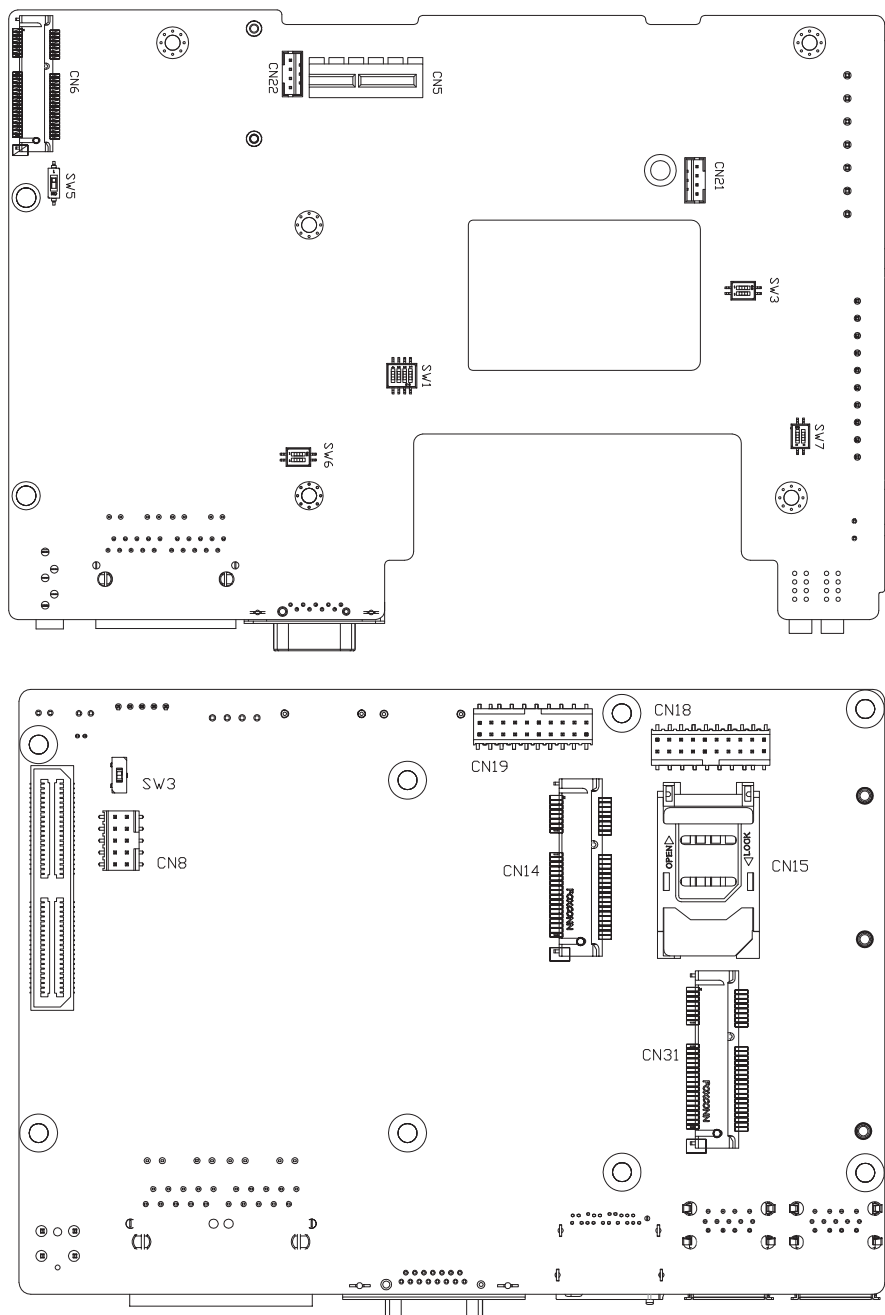


Figure A.1 Connector & Jumper Locations (front)

Table A.2: Connectors and Jumpers

| Label | Function |
|-------------------------|--|
| CN14 | mPCIe Slot (default mSATA) |
| CN6 | mPCIe slot (support iDoor technology). |
| CN31 | Half size mini PCIe slot |
| SW3*on the bottom board | Clear CMOS |
| SW7 | Digital Input wet/dry contact switch |
| SW3 | Remote wet/dry contact switch |

A.3 RS-232 Standard Serial Port (COM1)

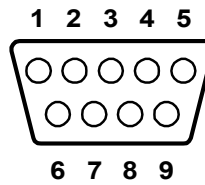


Table A.3: RS-232 Serial Port Pin Assignments

| Pin | Pin Name |
|-----|----------|
| 1 | DCD |
| 2 | RxD |
| 3 | TxD |
| 4 | DTR |
| 5 | GND |
| 6 | DSR |
| 7 | RTS |
| 8 | CTS |
| 9 | RI |

A.4 RS-422/485 Serial Port (COM2,3)

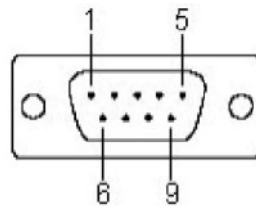


Table A.4: RS-422/485 Serial Port Pin Assignments

| Pin | RS-422 | RS-485 |
|-----|--------|--------|
| 1 | TX- | Data- |
| 2 | TX+ | Data+ |
| 3 | RX+ | NC |
| 4 | RX- | NC |
| 5 | GND | GND |
| 6 | NC | NC |
| 7 | NC | NC |
| 8 | NC | NC |
| 9 | NC | NC |

A.5 Power Connector (PWR)

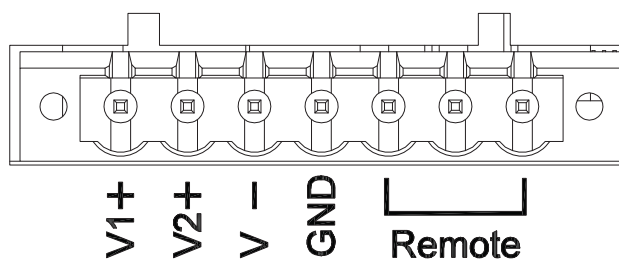


Table A.5: Power connector pin assignments

| | |
|----------|------------------------------|
| 1 V1+ | 12/24V _{DC} Input 1 |
| 2 V2+ | 12/24V _{DC} Input 2 |
| 3 V- | Power Ground |
| 4 GND | Chassis Ground |
| 5 Remote | Power Button |
| 6 Remote | System Reset |
| 7 Remote | Remote Ground |

A.6 USB Connector

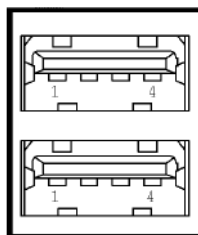


Table A.6: USB 2.0 Connector Pin Assignments

| Pin | Signal Name | Cable Color |
|-----|-------------|-------------|
| 1 | VCC | Red |
| 2 | DATA- | White |
| 3 | DATA+ | Green |
| 4 | GND | Black |

A.7 DisplayPort Display Connector

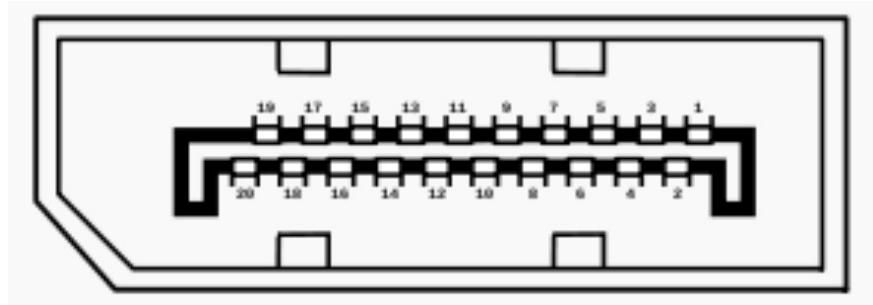


Table A.7: DisplayPort adaptor cable pin assignment

| Pin | Signal Name |
|-----|---------------|
| 1 | ML_Lane 0 (p) |
| 2 | GND |
| 3 | ML_Lane 0 (n) |
| 4 | ML_Lane 1 (p) |
| 5 | GND |
| 6 | ML_Lane 1 (n) |
| 7 | ML_Lane 2 (p) |
| 8 | GND |
| 9 | ML_Lane 2 (n) |
| 10 | ML_Lane 3 (p) |
| 11 | GND |
| 12 | ML_Lane 3 (n) |
| 13 | CONFIG1 |
| 14 | CONFIG2 |
| 15 | AUX CH (p) |
| 16 | GND |
| 17 | AUX CH (n) |
| 18 | Hot Plug |
| 19 | Return |
| 20 | DP_PWR |

A.8 Clear CMOS (SW3)

This switch on the bottom of the board and is used to erase CMOS data and reset system BIOS information.

Follow the procedures below to clear the CMOS.

1. Turn off the system.
2. Move the switch to PIN 2 to clear CMOS
3. Move the switch back to PIN 1
4. Turn on the system. The CMOS is now cleared.
5. Turn on the system. The BIOS is reset to its default setting.

Note! *An alternative method of clearing the CMOS data is to remove the RTC battery.*



A.9 AT/ATX setup

To setup AT/ATX mode, enter into BIOS setup menu, [Chipset]->[Restore AC Power Loss] options:

1. Power On: AT mode
2. Power off: ATX mode

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2019